# 笔鼠演示器

**- 使用说明**

1.拿起笔鼠打开后盖把电池装入电池仓，盖上后盖，如下图所示

电池仓
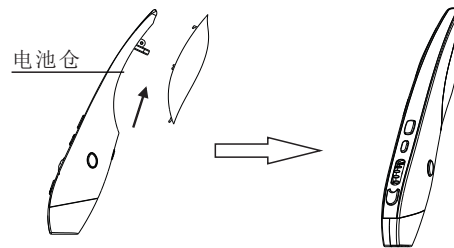
2.把接收器插入电脑的USB接口，打开笔鼠开关

3.笔鼠功能按键说明，如下图所示

激光笔开关
翻页滚轮
鼠标左键
光学感应器

dpi速度切换
鼠标右键
激光头

电池盖
电源开关
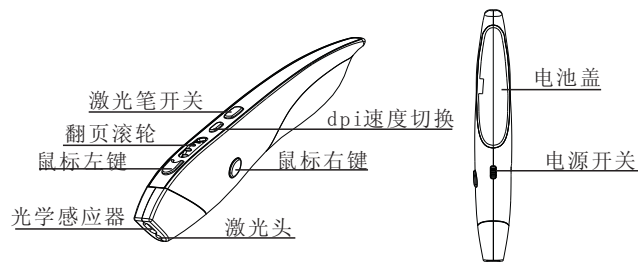
4.当你做为鼠标来用它时，最好将笔鼠放在笔座上移动

**- 规格**

1.R.F 2.4G无线连接,10米半径
2.尺寸:126.6x44.5x75.5mm
3.重量:30g
4.电源:1.5V 3A电池一节

**- 包装清单**

笔鼠演示器　　　1
接收器　　　　1
电池　　　　　1
笔鼠底座　　　1

**- 支持系统**

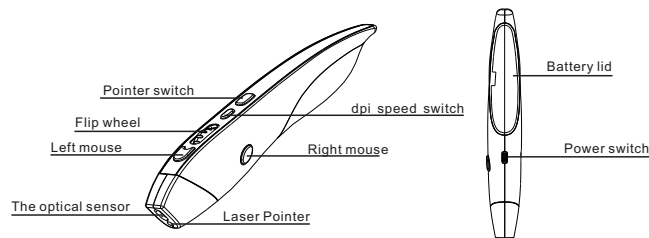Windows 2000/XP/CE/Vista/7/8
Linux
Mac OS
Android

# Pen Mouse Pointer

**- How to use:**

1. Snap off the battery cap from the top of the Air Pen .Insert the 3A battery into the compartment , ensure the Positive on the top .Cover the battery compartment by snapping in with the battery Cap .Slide down the Power switch on the side of the Pen ( as shown on the sketch ) . The optical lite will be ON .（as shown on the Sketch）.

Battery compartment
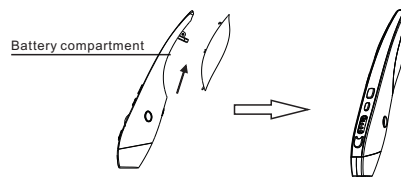
2. Insert the USB receiver into the USB socket of any computer or Android device with power on

3. Function descrption of Pen Mouse Presenter.

Pointer switch
Flip wheel
Left mouse
The optical sensor
dpi speed switch
Right mouse
Laser Pointer
Battery lid
Power switch

4. It is best to put the pen mouse into the holder to move it while you use it as mouse

**- Specification:**

1. R.F 2.4G connection, max 10 meters distance
2. Size: 126.6x44.5x75.5mm
3. Weight: 30g
4. Power supply: DC 3V (1.5V 3A BatteryX1)

**- Package  contents**

| | |
|---|---|
| Pen mouse pointer | 1 |
| USB receiver | 1 |
| Battery | 1 |
| Base of the mouse | 1 |

**- System supporting**

Windows 2000/XP/CE/Vista/7/8
Linux
Mac OS
Android